

MP973 Oil Sensors settings

Turn power on, then remove connector, Hold down booth arrow buttons then replace connector & hold for 6 sec, (FREE) cang the first 4 settings.

SP1	15
HYST	0.2
SP2	15
HYST2	0.2

Remove connector, hold down (mode) replace connector and hold mode for 3sec (MENU-5.5.1-niu)

SS1	niU
SN1	Sp
SD1	On
TON1	1
TOF1	1
SS2	Niu
SN2	sp
SD2	On
TON2	1
TOF2	1
PRIN	Niu
NRAN	Cn
NOFS	7.6
TRAN	Cell
SELN	Oil
SOUT	Temp
OTP	Mamp
yes	save